



SQUARE BRICK 4S SHOP BRICK SERIES

Natural/**Healthy**
Wear Resistant

SIZE:200X200MM/100X200MM
115X230MM/100X100MM




MONTILE°
SQUARE BRICK&4S SHOP BRICK SERIES




SBE081B
SIZE:200X200MM




SBE111
SIZE:200X200MM

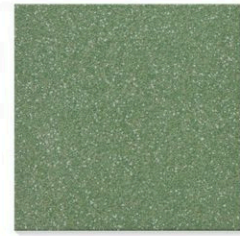

SBE406
SIZE:200X200MM

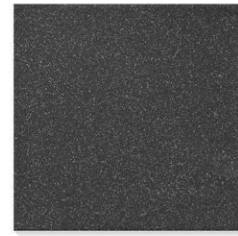

SBE715
SIZE:200X200MM

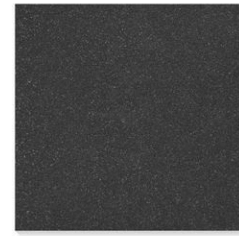

SBE715B
SIZE:200X200MM




SBE701
SIZE:200X200MM



SBE702B
SIZE:200X200MM



SBE802
SIZE:200X200MM

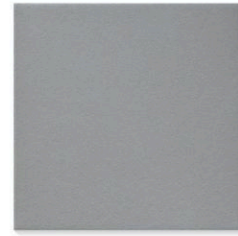

SBE803
SIZE:200X200MM




SBE804
SIZE:200X200MM




SBE811
SIZE:200X200MM



SBE811B
SIZE:200X200MM

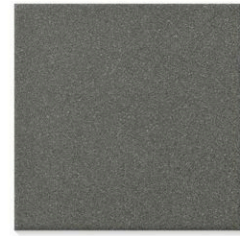

SBE817
SIZE:200X200MM

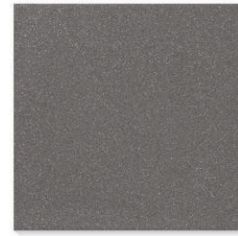

SBE819-1
SIZE:200X200MM



SBE820-1
SIZE:200X200MM



SBE827
SIZE:200X200MM




SBE837
SIZE:200X200MM



SBE857
SIZE:200X200MM




SBE2000
SIZE:200X200MM

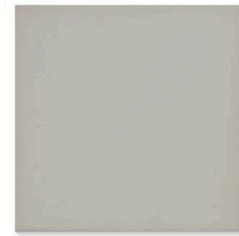


SBE2001
SIZE:200X200MM



SBE2002
SIZE:200X200MM

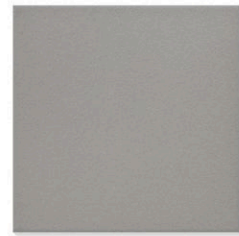

SBE2005
SIZE:200X200MM

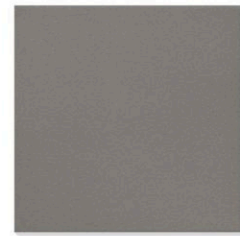

SBE2006
SIZE:200X200MM




SBE2007
SIZE:200X200MM



SBE2009
SIZE:200X200MM

MONTILE°
SQUARE BRICK&4S SHOP BRICK SERIES

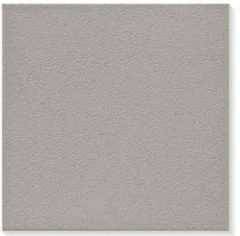


JBE083
SIZE:200X200MM



JBE080
SIZE:200X200MM




JBE118B
SIZE:200X200MM

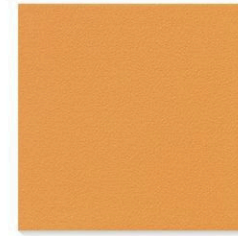

JBE328
SIZE:200X200MM



JBE703
SIZE:200X200MM

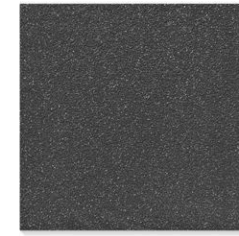

JBE715
SIZE:200X200MM




JBE715B
SIZE:200X200MM



JBE725B
SIZE:200X200MM



JBE729
SIZE:200X200MM

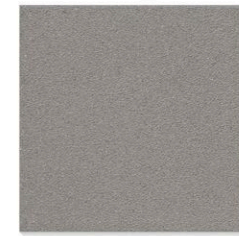

JBE811
SIZE:200X200MM



JBE811B
SIZE:200X200MM




JBE812B
SIZE:200X200MM




JBE814
SIZE:200X200MM



JBE814B
SIZE:200X200MM

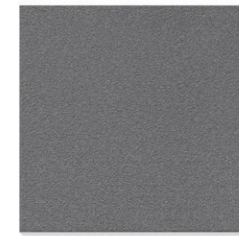

JBE815B
SIZE:200X200MM

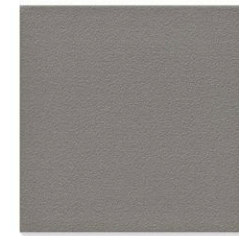

JBE820
SIZE:200X200MM



JBE866
SIZE:200X200MM

MONTILE°
SQUARE BRICK&4S SHOP BRICK SERIES




HP1000-2
SIZE:200X200MM



HP2000-2
SIZE:200X200MM




HP3000-2
SIZE:200X200MM

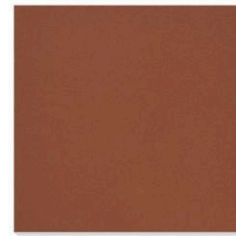



HP4000-2
SIZE:200X200MM




HP5000-2
SIZE:200X200MM

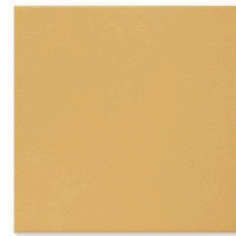

HP8000
SIZE:200X200MM

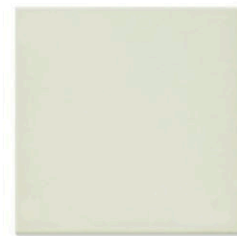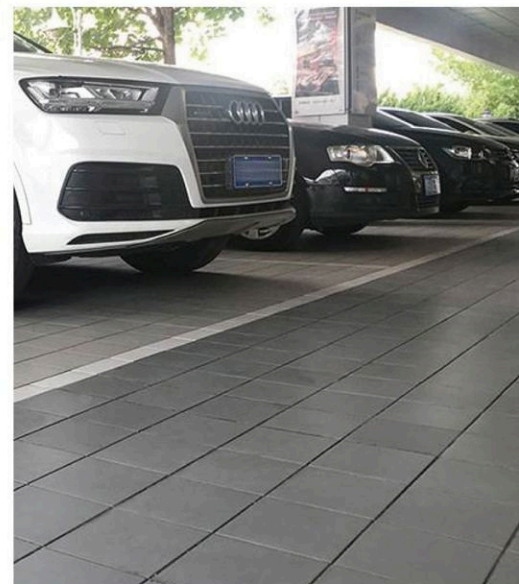

CHBE03
SIZE:200X200MM

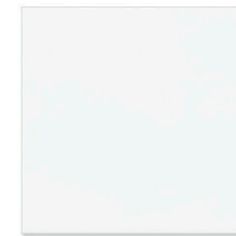

CHBE04
SIZE:200X200MM



CHBE09
SIZE:200X200MM



CHBE802
SIZE:200X200MM



CHBE806
SIZE:200X200MM




CHBE8803
SIZE:200X200MM

MONTILE°
SQUARE BRICK&4S SHOP BRICK SERIES



H2001
SIZE:200X200MM

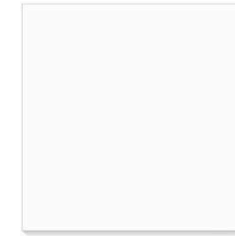

H2002
SIZE:200X200MM



FTD2002
SIZE:200X200MM



FTD2003
SIZE:200X200MM



HX2005
SIZE:200X200MM



HK2007
SIZE:200X200MM



NBE02
SIZE:200X200MM



SA2005
SIZE:200X200MM



MONTILE°
SQUARE BRICK&4S SHOP BRICK SERIES



HP1000
 SIZE:100X200MM



HP2000
 SIZE:100X200MM



HP3000
 SIZE:100X200MM



HP4000
 SIZE:100X200MM



HP5000
 SIZE:100X200MM



1015
 SIZE:100X200MM



2015
 SIZE:100X200MM




3015
 SIZE:100X200MM




7015
 SIZE:100X200MM



5000
 SIZE:100X200MM

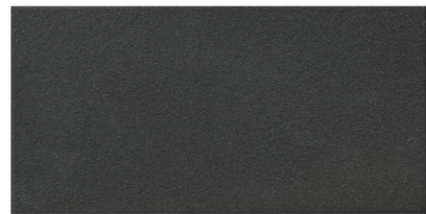

D2000
 SIZE:100X200MM

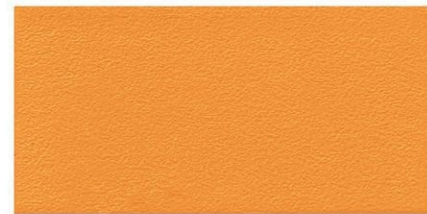

JMF328
 SIZE:100X200MM



TD7016
 SIZE:100X200MM




TD7017
 SIZE:100X200MM



TD7022
 SIZE:100X200MM

MONTILE°
SQUARE BRICK&4S SHOP BRICK SERIES




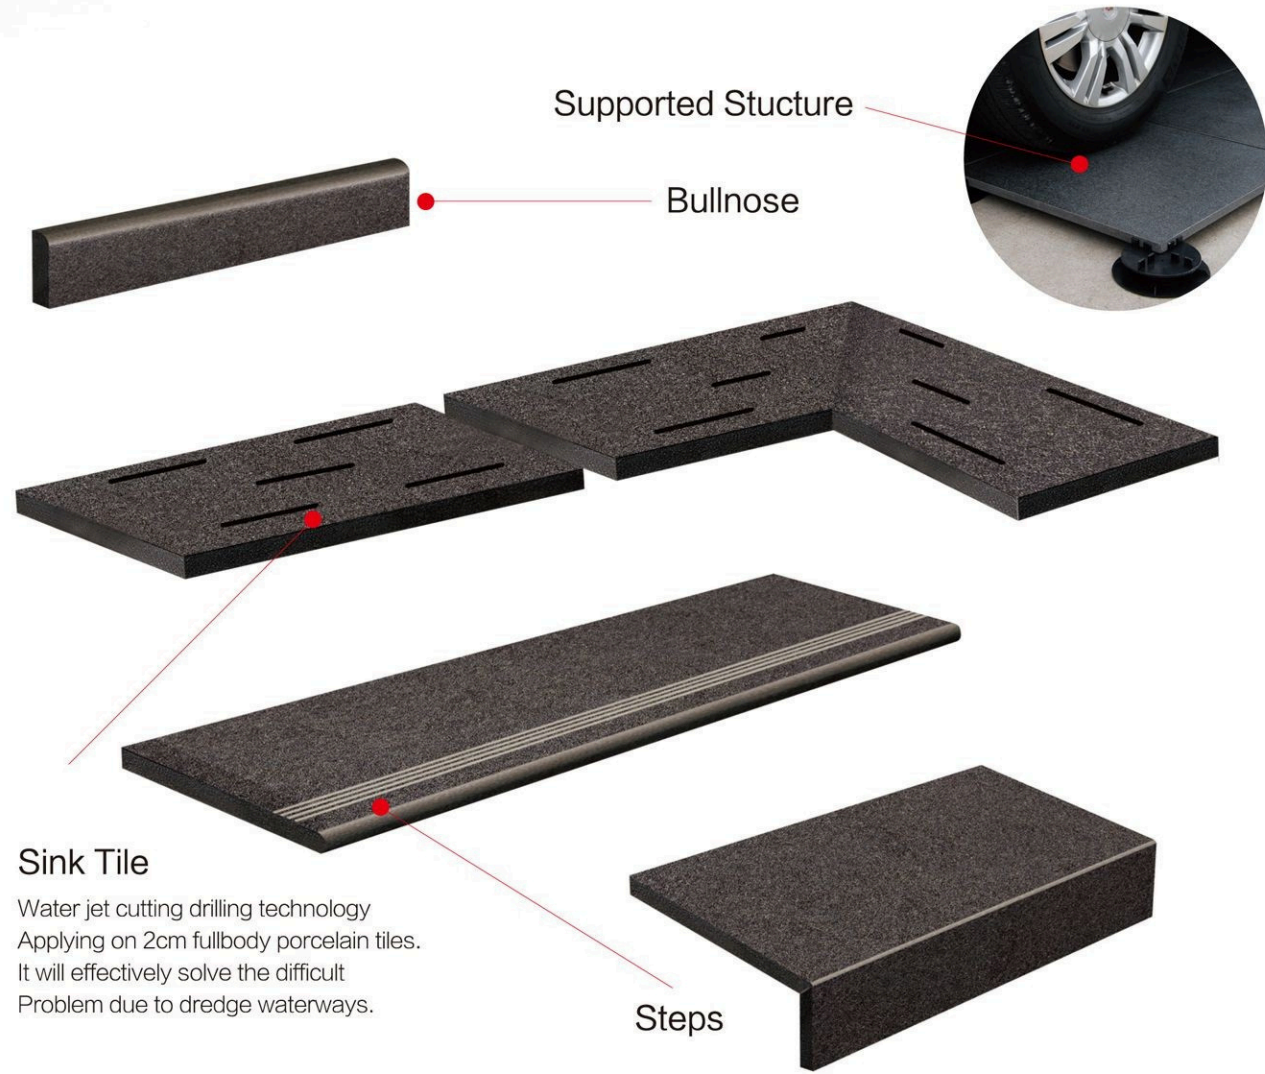

Installation Instruction

- 1. Selection:** Check the serial numbers and quantity of the products according to the design requirement, And check the working size and color number. Drawoff products in different packages to conduct trial-pavement inspection, if there is any doubt, please immediately contact our company, then you will get a timely solution.
- 2. Clean basal layer:** The basal layer must be thoroughly cleaned, no oil stain, coating or other adhesive substances allowed.
- 3. Tile immersion:** No need to be immersed.
- 4. Foundation alignment:** Before installation, the basal layer should be aligned, or the tile gaps and the tile surfaces will be uneven.
- 5. Pavement and pasting for gaps:** it is an important measure for ensuring the avoidance of bulging and spalling of pile surfaces caused by expansion caused by heat and contraction caused by cold.
- 6. Direction of pavement and pasting:** Products with textural characteristics should be paved and pasted according to the direction of grains.
- 7. Gap filling:** Gap filling of appropriate colors can be filled in gaps between files in only 24 hours after pavement and pasting of the tiles, and the gap fillers should be filled in and planished along the diagonal direction to tick the smooth and even gap, and then after 2-4 hours of natural drying, use a swabbing cloth to clean the surfaces of the piles.
- 8. Maintenance:** 24 hours after paving and pasting the piles, conduct spray curing for the tiles, and 48 hours after the paving and pasting can people walk on them.

SUSPENDED PAVING PASTE ADVANTAGE

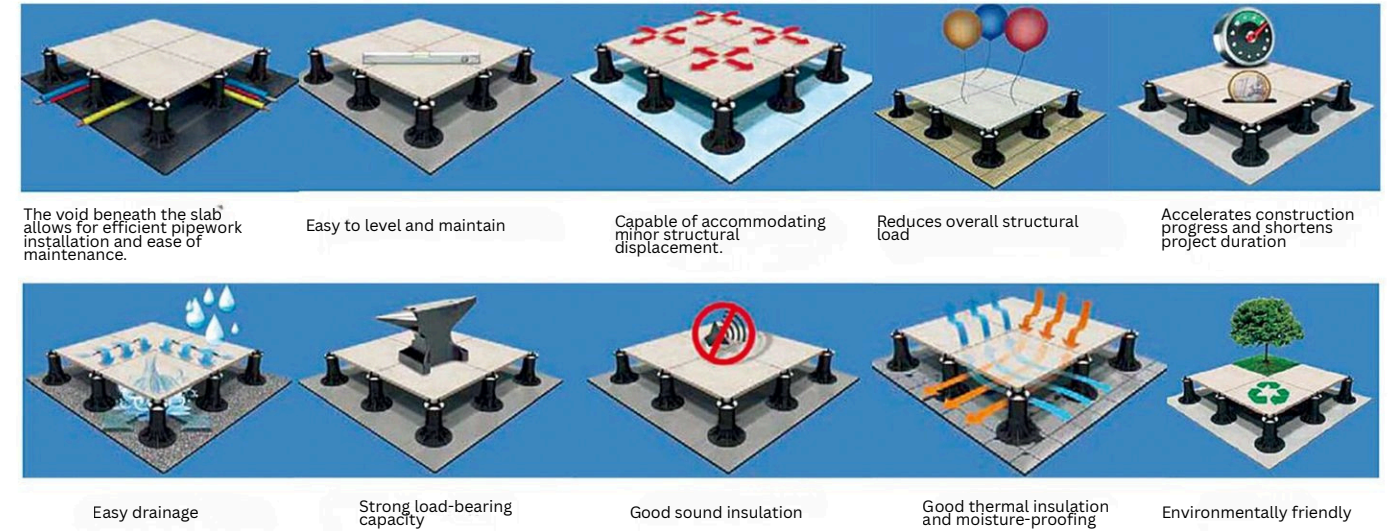

SUSPENDED PAVING PASTE ADVANTAGE

